





# 三相SCR電力調整器零位控制/相位控制 Three Phase Thyristor Power Regulate of Wiring. (Zero Crossing and Angle Phase)

三相來源電  
Three-phase power

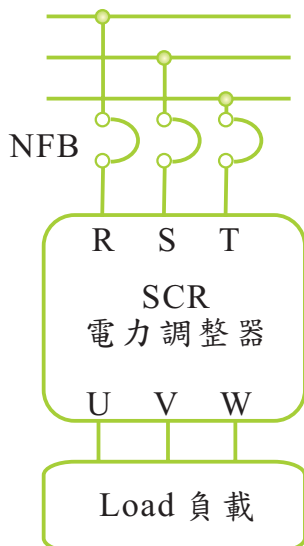

三相來源電  
Three-phase power

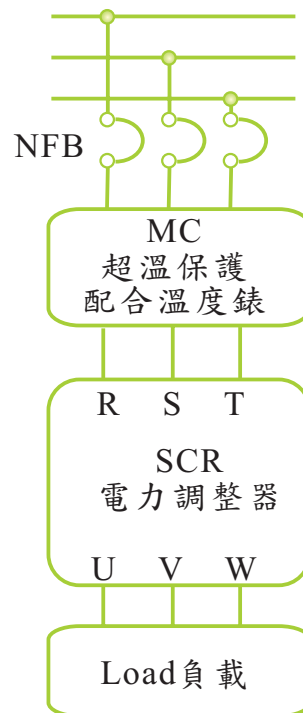


輸入DC電壓或是電流訊號  
Input DC voltage or current signal.



Input 220VAC  
auxiliary power.  
輸入220VAC輔助電源

PID溫度錶  
Temperature  
Controller

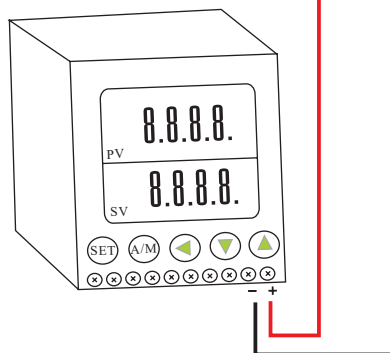

短路  
Short circuit


1. 外部VR如果調整到最小Min.，將不會輸出電壓，VR容量為10K  
Outside VR adjusts the minimum there will not be output power, VR capacity is 10K.
2. M點輸出為: DC5V/100mA。M is output: DC5V/100mA.



# 三相SCR電力調整器零位控制/相位控制 Three Phase Thyristor Power Regulate of Wiring. (Zero Crossing and Angle Phase)

零位控制指撥開關  
設定輸入訊號


Setting input single.

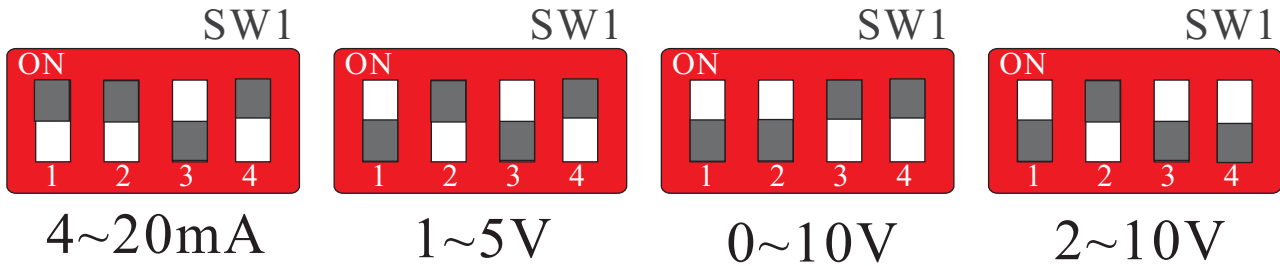

黑色鍵為向上或向下的方向，實體的指撥指撥顏色為白色。

相位控制指撥開關  
設定輸入訊號

Setting input single.

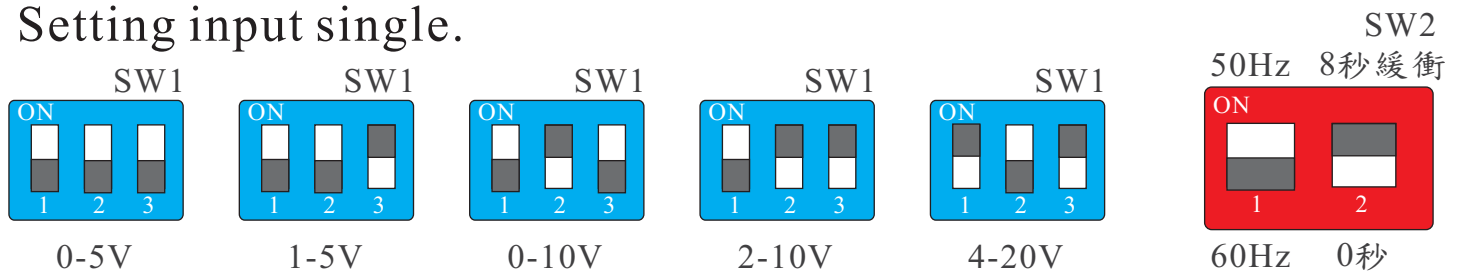

黑色鍵為向上或向下的方向，實體的指撥指撥顏色為白色。